
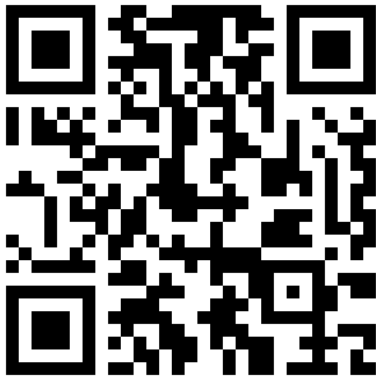


Connection Manual

myTankLinker: Auto Edition

– Automatic Tank Monitoring with Auto Pump Control
Smart ON/OFF Pump Control with Memory Retention & High-Efficiency Sensors

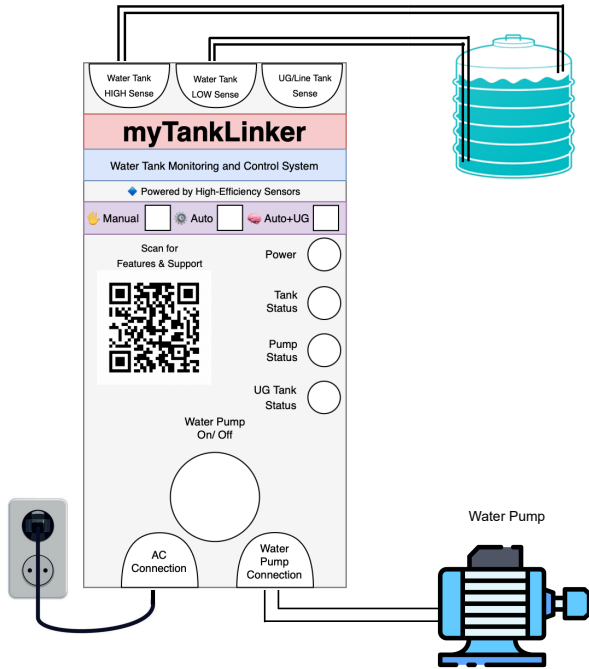

Scan to Learn More About Your Product

→ See detailed info, features, manuals, and guides for all myTankLinker editions.

Connection Manual (myTankLinker: Auto Edition)

– Automatic Tank Monitoring with Auto Pump Control

Smart ON/OFF Pump Control with Memory Retention & High-Efficiency Sensors

Step-by-Step Installation Guide

1. Mount the Device

- Mount the myTankLinker unit near the water pump in an indoor or weather-protected area.
- Ensure the wires from the tank, power, and pump can comfortably reach the respective terminals.

2. Connect the Tank Sensors

- Use 3-core or high-quality wire to connect the sensors to the overhead tank.
- Connect:
 - **HIGH Sense** wire to the top level of the tank.
 - **LOW Sense** wire to the minimum water level.
 - **UG/Line Tank Sense** should be left unconnected (used only in the Auto+UG Edition).

3. Connect the Water Pump

- Locate the **Water Pump Connection** terminal.
- Connect the pump's live and neutral wires securely.
- Use proper insulation and wire lugs to ensure electrical safety.

4. Connect to AC Power

- Connect the **AC Connection** input to a standard 230V AC power outlet (live and neutral).
- Ensure the power switch is **OFF** before wiring to prevent electrical shock.

5. Verify Status LEDs

Once powered ON:

- **Power LED:** Should turn ON.
- **Tank Status LED:**
 - **ON** = Water tank is full (HIGH level detected)
 - **OFF** = Tank is below HIGH level / not full
- **Pump Status LED:**
 - **ON** = Pump is running
 - **OFF** = Pump is off
- **UG Tank Status LED:** Not Available/ Will remain OFF (not used in this version)

Working Logic – Auto Edition

- The pump **starts automatically** when the tank level goes **below the LOW sensor**.
- The pump **stops automatically** when the tank reaches the **HIGH sensor** (tank full).
- In the event of a power failure, the **previous pump status is retained** due to built-in memory retention.

QR Code

Scan the QR code on the front panel to:

- Full User Manual
- Other myTankLinker Products
- Troubleshooting Guide
- Setup Video Tutorial

Safety Precautions

- Do **not touch** the unit with wet hands.
- **Always disconnect power** before opening or rewiring the device.
- Avoid placing the controller in **direct sunlight** or **exposed areas** to prevent overheating or damage.
- **Wear insulated footwear (shoes or slippers)** while rewiring or accessing internal components to avoid electric shock.